



GELTO
SOLAR ENERGY

VFD CONNECTION GUIDE

5KW

7KW

11KW


22KW

30KW

37KW

45KW

نوٹ: سولر لگانے والے پی بی میں کنکشن نہ لگائیں۔

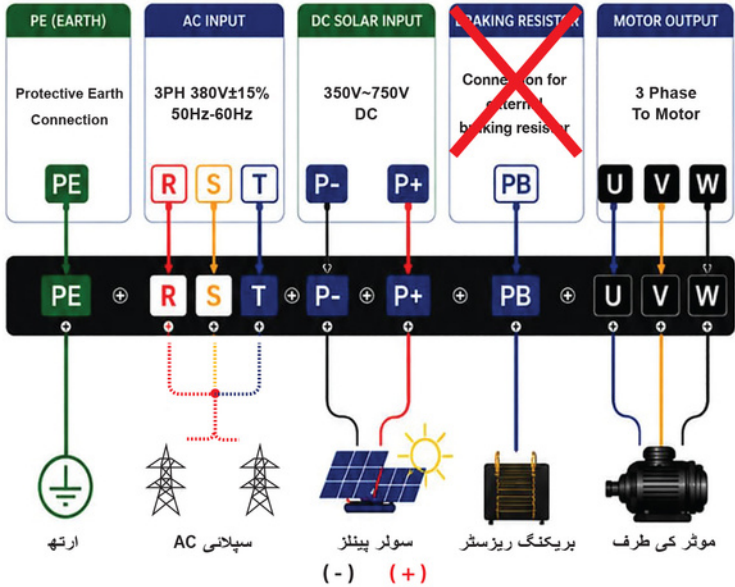

DISCLAIMER

P-

جن ماڈلز میں **P (-)** ٹرمینل موجود نہ ہو۔ لہذا سولر پینلز کی **Negative (-)** وائر کو **R, S, T** میں سے کسی ایک خالی ٹرمینل سے کنیکٹ کریں۔

PB

PB ٹرمینل صرف **External Braking Resistor** کے لیے مختص ہے۔ اسے کسی بھی صورت سولر یا **AC** وائرنگ کے لیے استعمال نہ کریں۔

✓

غلط وائرنگ کی صورت میں **VFD** کو نقصان پہنچ سکتا ہے۔ پاور آن کرنے سے پہلے تمام کنیکشنز اچھی طرح تصدیق کرلیں۔

نوٹ: غلط کنکشن کی وجہ سے ہونے والے نقصان کی ذمہ داری صارف پر ہوگی۔



MARKING	DESCRIPTION
	EARTH (GROUND) Protective Earth connection.
P-	DC BUS NEGATIVE DC bus negative terminal If VFD does not have P-, connect the negative to any one of the R,S, or T input terminals.
P+	DC BUS POSITIVE DC bus positive terminal
PB	BRAKING RESISTOR Connection for external braking resistor.
R	AC INPUT - PHASE R AC power input phase R.
S	AC INPUT - PHASE S AC power input phase S.
T	AC INPUT - PHASE T AC power input phase T.
U	AC INPUT - PHASE U AC power input phase U.
V	AC INPUT - PHASE V AC power input phase V.
W	AC INPUT - PHASE W AC power input phase W.

